2.Exploded Views and Parts List

2-1 Cassette Deck Exploded View and Parts List

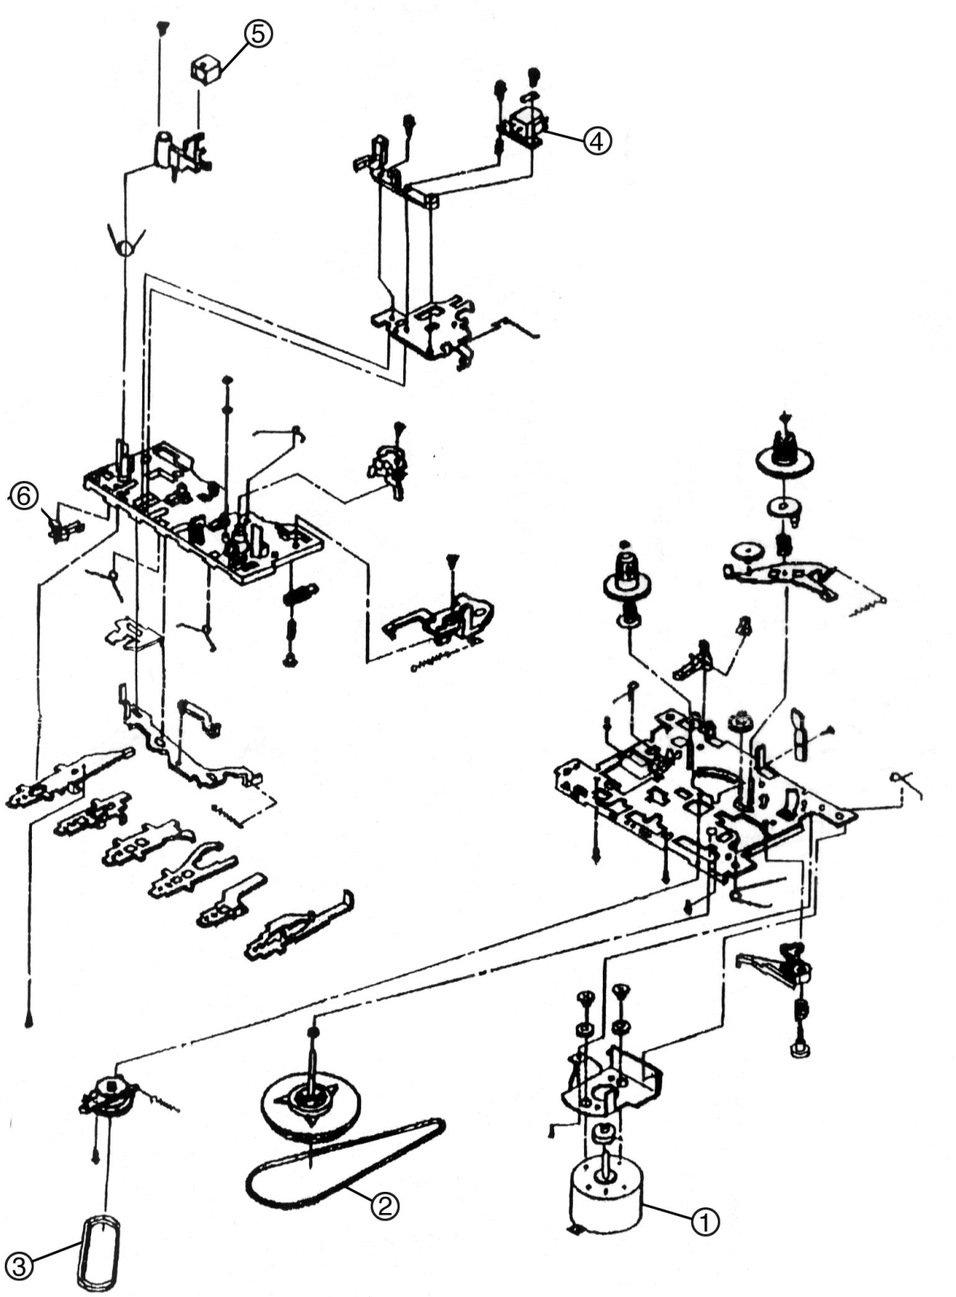

No.	Code No.	Description	Specification	Remarks
	AH81-00456K	DECK ASS'Y	CS-21FV-868	
1	AH81-00566A	MOTOR	EG530AD9B	6002-02-17
2	AH81-00432B	M BELT	21-632	21-632
3	AH81-00432C	RF BELT	21-618	21-618
4	AH81-00432D	RP HEAD	20B03	20B03
5	AH81-00432E	E HEAD	TC230AN-SL	TC230AN-SL
6	AH81-00432H	LEAF SWITCH	21-706	21-706

2-2 Main Exploded View and Parts List

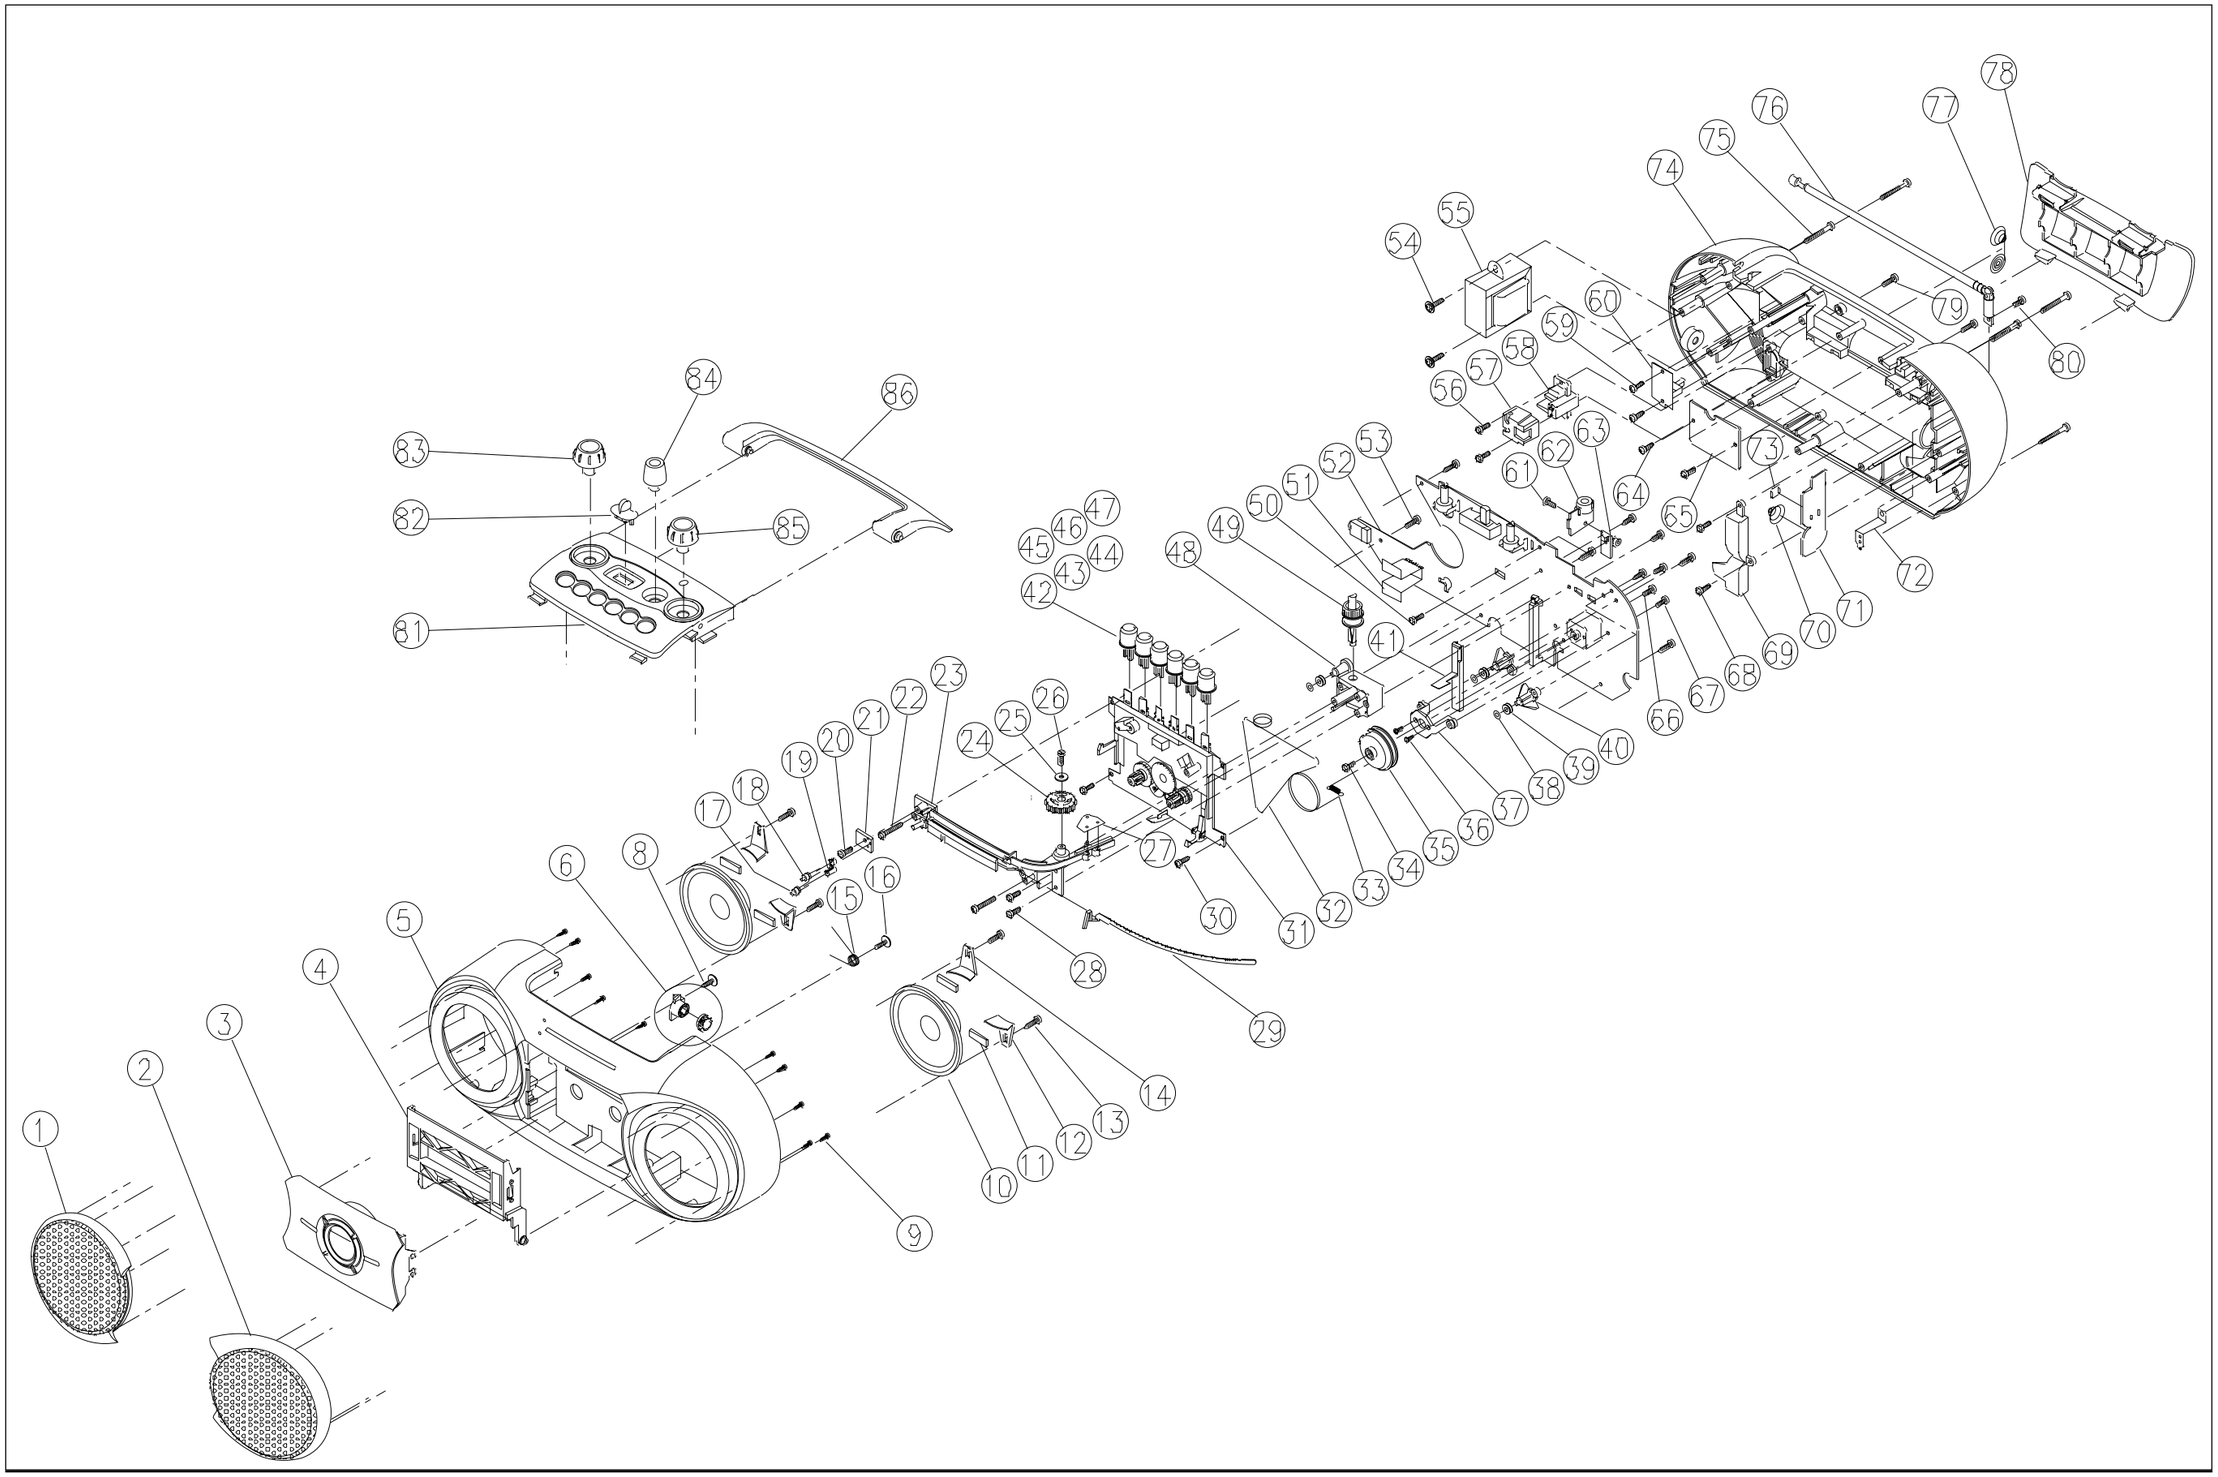

2-2-2 Parts List

No.	Code No.	Description	Specification	Remarks
1	AH81-00463A	SPEAKER L ASS'Y	GRILLE + RING	
2	AH81-00463B	SPEAKER R ASS'Y	GRILLE + RING	
3	AH81-00461A	CASS DOOR ASS'Y	DOOR + LENS HOLDER + LENS	
	AH81-00461B	CASS DOOR ASS'Y	DOOR + LENS HOLDER + LENS	ST-A500G
4	AH81-00458H	CASS DOOR BKT	ABS MOLD.M.GRAY2B051	
5	AH81-00460A	FRONT CABINET ASS'Y	DIAL LENS +FRONT CABINET+COVER	
	AH81-00460B	FRONT CABINET ASS'Y	DIAL LENS +FRONT CABINET+COVER	ST-A500G
6	AH81-00454J	DAMPER ASS'Y	ASSEMBLY	
10	AH81-00456L	SPEAKER-GENERAL	3inch,40hm,1w	
12	AH81-00459G	SPEAKER CLAMP (R)	1mmTHK	
14	AH81-00458T	SPEAKER CLAMP (L)	1mmTHK	
15	AH81-00458W	CASS DOOR SPRING	DIA1.0 SUS304WPB	
17	AH81-00456R	LED-LAMP	GREEN,2mm,ROUND	
18	AH81-00456Q	LED-LAMP	RED,2mm,ROUND	
19	AH81-00458P	LED HOLDER	ABS MOLD.COL	
21	AH92-01090E	LED BOARD ASS'Y	12*55.8*1.6T,94HB	
23	AH81-00458G	DIAL BRACKET	ABS MOLD. COL	
24	AH81-00458E	DIAL GEAR	ABS MOLD. COL	
27	AH81-00458X	DIAL POINTER COVER	PLATE0.5mmTHK PVC SHT	
29	AH81-00458J	DIAL POINTER	PP/PE MOLD.WHITE	
31	AH81-00456K	CASS DECK	CS-21FV-868	
32	AH81-00459H	DIAL CORD	Dia0.6MM	
33	AH81-00458V	DIAL SPRING	Dia0.4 SPRING STEEL WIRE	
35	AH81-00458K	DIAL DRUM	ABS MOLD.COL	
37	AH81-00458R	PVC HOLDER	ABS MOLD.COL	
39	AH81-00458B	DIAL PULLEY	0.D8XI.D3.2X3mm THK	
40	AH81-00458M	PULLEY HOLDER	ABS MOLD.COL	
41	AH81-00458U	RECODING PLATE	0.7mmTHK STAINESS STEEL	
42	AH81-00468A	CASS KNOB (PAUSE)	ABS GRAY	
43	AH81-00468B	CASS KNOB (ST/EJ)	ABS GRAY	
44	AH81-00468C	CASS KNOB (REW)	ABS GRAY	
45	AH81-00468D	CASS KNOB (F.F)	ABS GRAY	
46	AH81-00468E	CASS KNOB (PLAY)	ABS GRAY	
47	AH81-00468F	CASS KNOB (RECORD)	ABS GRAY	
48	AH81-00458Q	SHAFT HOLDER	ABS MOLD.COL	
49	AH81-00458F	TUNING SHAFT	ABS MOLD. COL	
51	AH81-00459E	HEAT SINK	USHAPE-0.5mmTHK	
52	AH92-01090B	MAIN BOARD ASS'Y	T-BAND COM	
55	AH81-00457A	TRANS-POWER	E148ϕ19mm,220,KS	
57	AH81-00459J	AC SOCKET HOLDER	ABS	
58	AH81-00384D	JACK-AC POWER	CP2,W/COVER	
60	AH92-01090D	BEAT CUT BOARD ASS'Y	A500,COM	
62	AH92-01090F	MIC BOARD ASS'Y	A500,COM	
63	AH81-00458N	MIC PCB BKT	ABS MOLD.COL	
65	AH92-01090C	RECT BOARD ASS'Y	A500,COM	
69	AH81-00458L	BATTERY HOLDER	ABS MOLD.COL	
70	AH81-00459C	BATTERY CONTACT -	SPRING DIA1.0 mm	
71	AH92-01090G	BATTERY BOARD ASSY	A500,COM	
72	AH81-00459F	ANTENNA PLATE	0.3mmTHK COPPER PLATE	
73	AH81-00459B	BATTERY CONTACT +	0.4mmTHK SHT	
74	AH81-00465A	REAR CABINET	HIPS SILVER	
	AH81-00465B	REAR CABINET	HIPS D/GRAY	ST-A500G
76	AH81-00456J	ANT ROD	4S,733mm,JF52196	
77	AH81-00459D	BATTERY CONTACT + -	SPRING DIA1.0 mm	
78	AH81-00467A	BATTERY DOOR	HIPS SILVER	
	AH81-00467B	BATTERY DOOR	HIPS D/GRAY	ST-A500G
81	AH81-00464A	TOP PANEL	HIPS M/GRAY	
	AH81-00464C	TOP PANEL	HIPS M/GRAY	ST-A500G
82	AH81-00469D	SILDE KNOB	ABS M/GRAY	
83	AH81-00469B	VOLUME KNOB	ABS SILVER	
84	AH81-00469C	TONE KNOB	ABS D/GRAY	
85	AH81-00469A	TUNING KNOB	ABS SILVER	
86	AH81-00466A	HANDLE	HIPS GRAY	